

ON
ALL
TIME
SW
OFF

MODEL CODE 008-3261

TO SET TIME

- SET
- TIME
- 9
- :
- 0
- 0
- YES

HORN	MISC. SHOT TIME	CLOCK MODES	SET
TIME OUT TIMER	PNLTY ON OFF	PNLTY INSERT	TIME
HOME GOAL	HOME SHOTS	PNLTY CLEAR	HOME PNLTY
GUEST GOAL	GUEST SHOTS	PNLTY EDIT	GUEST PNLTY

7	8	9	YES
4	5	6	NO
1	2	3	HOME SCORE
:	BLANK	0	GUEST SCORE

 
TO SET SCORE

- SET
- HOME SCORE
- 5
- 4
- TO ADD TO SCORE
- HOME SCORE
- 2


NEVCO SCOREBOARD COMPANY GREENVILLE, IL 62246 USA

K2-28

Nevco MPC-4 Model 008-3261 (or other number) together with hockey overlay K2-28



 hand-controller will over-ride this switch, if present.



To	Tips	Do < display > [Keys to press] # = digits 0-9.
Start with the power "off".	Switch on the power. If no power, check the power cord. <i>NOTE: when the clock runs out and the auto-horn sounds, don't shut off the power. The horn will normally stop after a couple of seconds. Waiting will spare you the stress of redoing it all.</i>	Flip power switch, located along the upper right hand side of the control box. Model number (6 digits) is on set top. Answer scrolling text questions: <ul style="list-style-type: none"> ✓ If asks <Start where turned off?> press [NO] ✓ If asks <Use an auto start program> press [NO] ✓ <Hi I'm your Nevco MPC-4. I can operate over 500 Nevco Models ... Please enter your model code> example: [0][0][8][3][2][6][1] ✓ <Do you want to use shot clocks?> [NO] ✓ <Use penalty time outs?> press [NO]
Reset scoreboard to 0 : 0 and clear penalties if showing	This is faster than powering off	press [SET] [HOME SCORE] [0] press [SET] [GUEST SCORE] [0] press [HOME PNLTY] [PNLTY CLEAR] [YES] press [GUEST PNLTY] [PNLTY CLEAR] [YES]
Set time & period	Stop the clock (if it's running)! Don't forget to press the [:] After [YES], set period number:	press [SET] [TIME] [#] [#] [:] [#] [#] [YES] e.g. 12 minutes – press [1][2] [:] [0][0] [YES] press [#] <--- use 0 for pre-game warm-up
Start & stop clock	A hand control, if "running", may disable the set top Timer switch.	Use hand controller if available. If broken, unplug it so that the machine-top Timer start/stop switch will work.
Set exact scores	Works only up to a score of 9.	press [SET] [HOME SCORE] [#] <--- 0-9 only press [SET] [GUEST SCORE] [#] <--- 0-9 only
Increment scores	Ordinarily, you would add "1". No need to press [YES], but no harm done either... hear PEEP.	press [HOME SCORE] <+> [1] <--- ordinarily press [GUEST SCORE] <+> [1] <--- ordinarily Instead of pressing [YES], press [TIME] to toggle the display back to to the countdown clock.
Enter a penalty <small>if you must adjust duration: [HOME / GUEST PNLTY] [PNLTY EDIT] [0][0] [:] [0][0] [YES]</small>	Stop the clock if it's running. After pressing [YES], you still need to input a 2-digit player number. Just use [0][0] for scoreboards that won't show it.	press [SET] [HOME PNLTY] [2] [:] [0][0] [YES] press [SET] [GUEST PNLTY] [2] [:] [0][0] [YES] press [0][0] <--- enter *any* 2 digits e.g. 0 0 3rd penalties per side will display after the 1st elapses.
Clear a penalty	When the short-handed team has been scored against.	press [HOME PNLTY] [PNLTY CLEAR] [YES] press [GUEST PNLTY] [PNLTY CLEAR] [YES]